


Common SPC Thread Sizes

INSTRUCTIONS: Please print as actual size with no scaling on standard 8.5" x 11" paper.

NOTE: Please refer to the heuristics to help determine Thread Type (NPT, BSPT, etc)

DISCLAIMER: The chart and heuristics are only meant as a guide and does not ensure true thread size and type will be identified. SPC is in no way responsible for any fitment issues caused by misidentification.

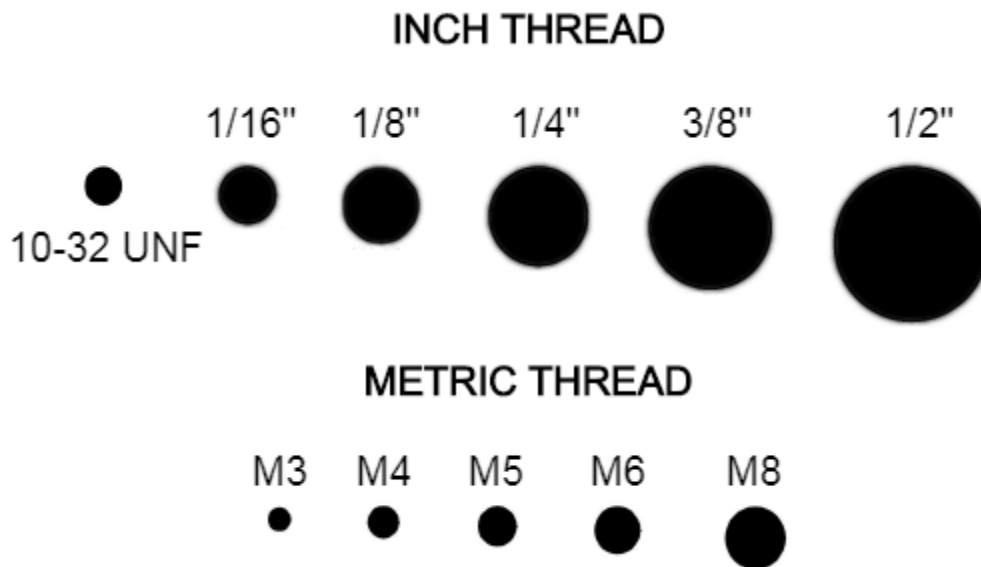

General Heuristics

If thread is **TAPERED**

AND

If your equipment uses **INCH** tubing, it will most likely use **NPT** thread.

If your equipment uses **METRIC** tubing, it will most likely use **BSPT** thread.

If thread is **PARALLEL**

AND

If your equipment uses **METRIC** tubing, it will most likely use **BSPP** thread.

If your equipment uses **METRIC** tubing and thread size is **under 8mm**, it will most likely use **Metric** thread.

If your equipment uses **INCH** tubing and thread size is **under 8mm**, it will most likely use **UNF** thread.